

MITSUBISHI

Inspection and Replacement of the Engine Intake Air Filter Instructions



Toppo **BJ** ***S***
(GF-H42A)

Index

Description	Page No.
Engine Intake Air Filter	1

Engine Intake Air Filter



Step-1
Open the Hood



Engine Intake Air Filter Assembly



Step-2
Clean away any excessive dirt and grim from the Engine Intake Air Filter Assembly.



Step-3
Un-Snap Two (2) Holding Buckles.



Step-4
Push rear cover with air hose, back away from front cover with Holding Buckles and air filter.



Step-5
Carefully pull up on rear cover and air hose, making sure not to damage air filter.



Step-6
Remove old air filter and inspect condition.



Step-7
"Replace old" or "install new" air filter.



Step-8
Put air filter cover back on, using the two (2) tabs on the bottom as a guide.



Step-9
Check and ensure that the air filter cover is uniformly seated around filter.



Step-10
Snap On Two (2) Holding Buckles.



Step-11
Inspect Engine Compartment for any materials/ tools that you may have forgotten.



Step-12
Close the Hood
You're Done...

